

# KINGSTON BRASS


THE TRADITION OF FINE BRASS

## Installation Instructions For Use With KB's Double Offset Bath Supply


### BEFORE BEGINNING INSTALLATION

1. Flush plumbing lines to clear debris in pipe and plumbing lines to avoid existing clogs into waterway & cartridge system of new faucet fixture.
2. Shut off both supply lines after flushing


### ASSEMBLY INSTRUCTIONS FOR HANDLES

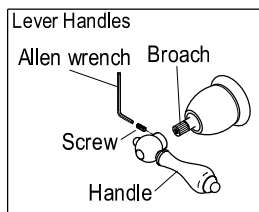

- Lever Handles :**
1. Be sure the broach screws are tightened before installing the lever handles.
  2. Put the lever handles on the broaches and tighten using the allen wrench provided.

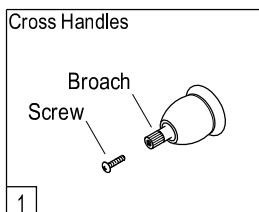



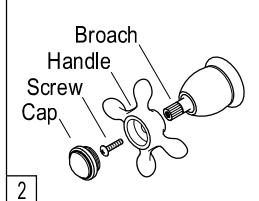


- Cross Handles :**
1. Unscrew the screws from the top of the broaches.
  2. Remove the insert caps from the cross Handles.



3. Put the cross handles on the broaches and then tighten the screws. Insert the caps on the cross handles.

### Parts:

Lock Nut	Cone Washer & Coupling Nut	Screw & Anchor	Screw & Set Screw
			
2 Pcs	2 Pcs	14 Pcs	2 Pcs

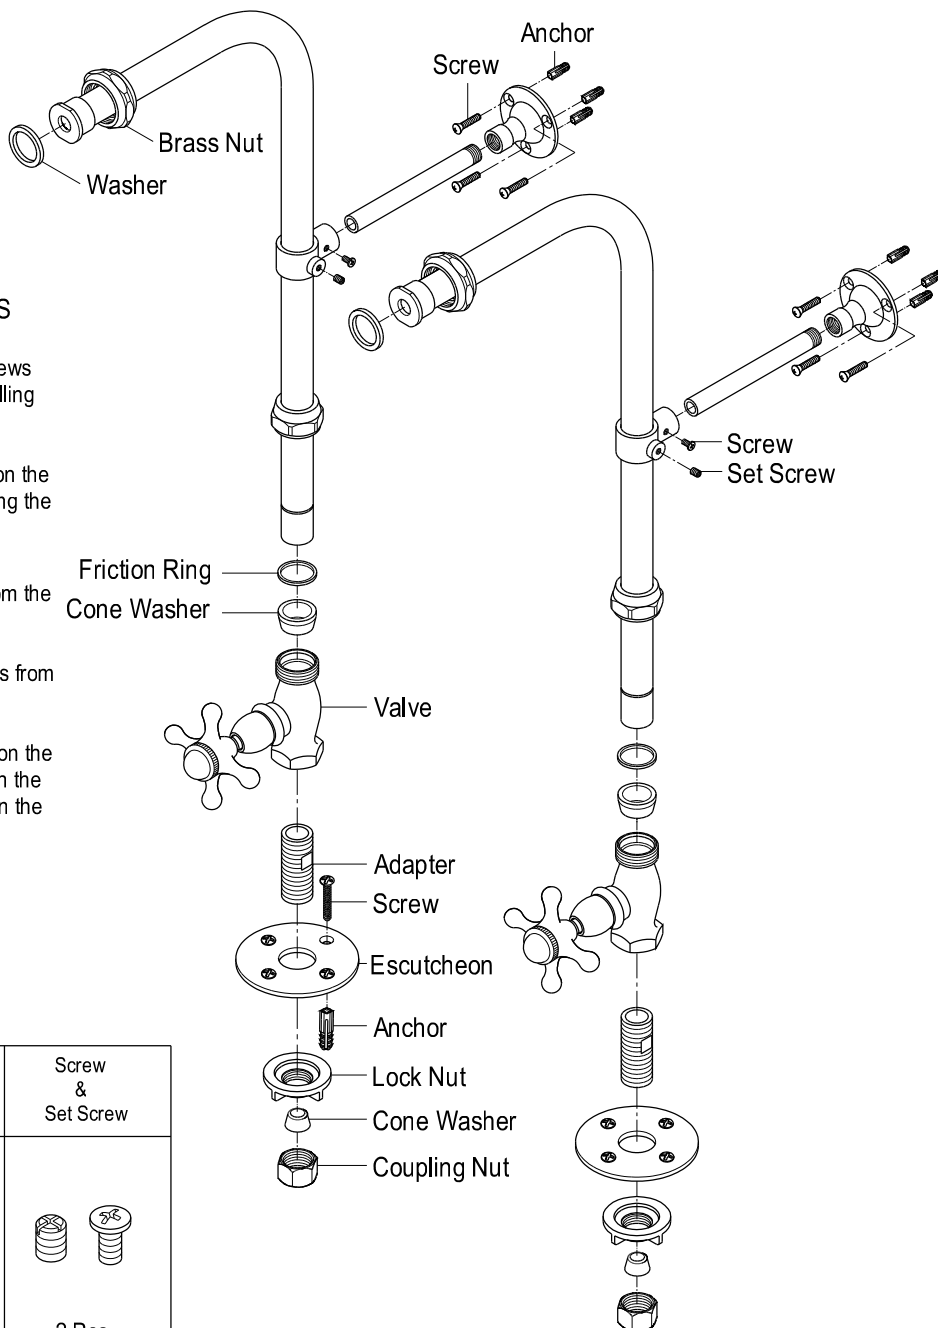

[www.kingstonbrass.com](http://www.kingstonbrass.com)

TOLL-FREE CUSTOMER SERVICE: 1-877-2-KBRASS

TECHNICAL SUPPORT E-mail: [service@kingstonbrass.com](mailto:service@kingstonbrass.com)

12775 Reservoir Street, Chino, CA91710