

APPROVED VENDORS

LEVITON

VENDOR/
PART No. DI-40X-01759-00A




INSTRUCTION SHEET

- 60# WHITE BOND
(MATERIAL #) (MATERIAL DESCRIPTION)

1 PAGE(S), 5.500 X 8.500 SHEETS
(FINISH SIZE)

PRINTED BLACK, PRINTED 2 SIDE(S)
(2.125 X 2.750 AFTER FOLDING)
(FINISHED FOLDED SIZE)

NOTE: USE ONLY APPROVED ARTWORK!!

REVISIONS C S	SUPPLEMENTARY DRAWING	MATERIAL	TITLE INSH. F/ 77DV, 77DW, & P77DW	PART NUMBER 99043742B
UNLESS OTHERWISE SPECIFIED: LINEAR DIMENSIONS ARE IN INCHES TOLERANCE = ±0.015" ANGULAR DIMENSIONS ARE IN DEGREES TOLERANCE = ±1.0°		DO NOT SCALE DRAWING BROAN-NUTONE LLC HARTFORD, WISCONSIN		
CMW 2-05-08 ECN 008292 DRS 5/ 6/05 ECN 006592		A BY DATE CHANGE NO. REV		
DESCRIPTION				
REVISED ELECTRICAL DIAGRAM SHOWING BLACK WIRE TO SCREW TERMINAL WAS PUSH IN. RELEASED. REPLACES 99042515.				
MUST BE ROHS COMPLIANT		CLASSIFIED CHARACTERISTIC SYMBOLS MAJOR - LIKELY TO CAUSE SERIOUS DAMAGE TO THE PRODUCT, SIGNIFICANTLY REDUCE THE FUNCTION, OR CAUSE UNACCEPTABLE APPEARANCE. 		
CRITICAL - LIKELY TO RESULT IN HAZARDOUS OR UNSAFE CONDITION (SAFETY RELATED). 		MINOR - LIKELY TO CAUSE SERIOUS DAMAGE TO THE PRODUCT, SIGNIFICANTLY REDUCE THE FUNCTION, OR CAUSE UNACCEPTABLE APPEARANCE. 		

MODELS 77DV, 77DW, P77DV, P77DW FOUR-FUNCTION CONTROL INSTALLATION INSTRUCTIONS

SAFETY PRECAUTIONS

- Installation work and electrical wiring must be done by qualified person(s) in accordance with all applicable codes and standards, including fire-related construction.
- Turn OFF power and lock out service panel before installing or wiring this control.
- To prevent serious injury from electrical shock or damage to electrical components - **DO NOT WIRE HOT!**
- Never place a switch where it can be reached from a tub or shower.
- When cutting or drilling into a wall or ceiling DO NOT damage electrical wiring and other hidden utilities.
- Warranty is void if miswired.
- **IMPORTANT:** Make sure both the switch box and the product to be controlled are properly grounded.

RATING SPECIFICATIONS

- Two-position rocker switches are rated 15 Amps @ 120VAC.
- Three-position rocker switch is rated 5 Amps @ 125VAC. **DO NOT USE THIS ROCKER SWITCH FOR A HEATER ELEMENT!**
- Total load on this control must not exceed 20 Amps @ 120VAC.

INSTALLATION


WARNING: TO AVOID FIRE, SHOCK, OR DEATH; TURN OFF POWER AT ELECTRICAL PANEL AND TEST THAT POWER IS OFF BEFORE WIRING!

CAUTION: Use this control only with copper or copper-clad wire. Do not use aluminum wire with this device.

1. Install at least a 2½" deep double-gang switch box with a single device adapter plate.
2. Remove insulation from wires on control (approximately 5/8").
3. Connect wires (per **WIRING DIAGRAM** on back).
 - Use proper wire nut sizes for number and size of wires.
 - For push-in wire terminals: Use only #14-AWG solid copper wire.
 - For screw terminals: #14-AWG or #12-AWG wire may be used. Tighten screw terminals 14 to 16 in.-lbs torque.

Make sure control's ground wire is securely connected to power line ground and (if applicable) metal switch box.

4. Position wires in switch box leaving room for the control.
5. Mount control using screws provided. Attach wall plate.
6. Restore power at electrical panel.
7. Switch functions may be identified by applying labels (included) to the rockers or wallplate.

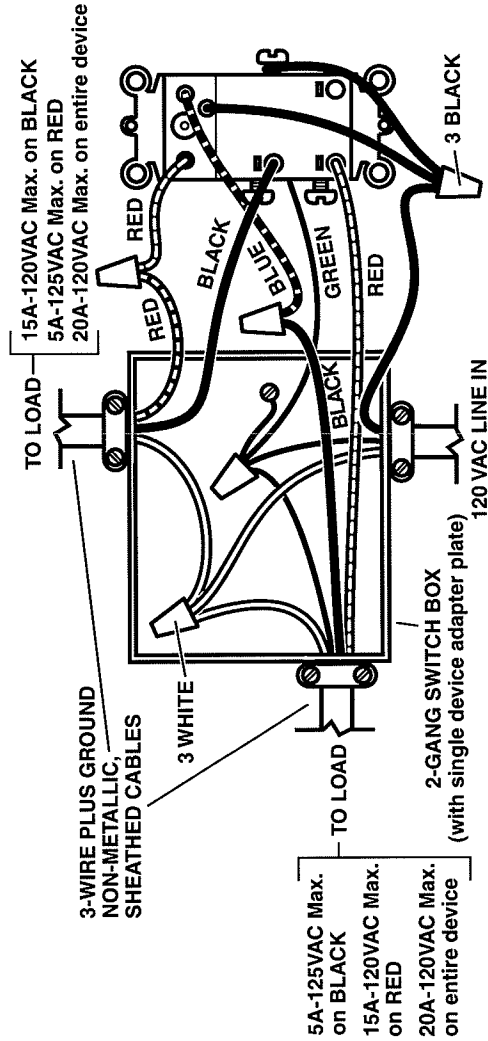

BROAN-NUTONE LLC ONE YEAR LIMITED WARRANTY

Broan-NuTone LLC warrants to the original consumer purchaser of its products that such products will be free from defects in materials or workmanship for a period of one year from the date of original purchase. THERE ARE NO OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

During this one-year period, Broan-NuTone LLC will, at its option, repair or replace, without charge, any product or part which is found to be defective under normal use and service. THIS WARRANTY DOES NOT EXTEND TO FLUORESCENT LAMP STARTERS AND TUBES. This warranty does not cover (a) normal maintenance and service or (b) any products or parts which have been subject to misuse, negligence, accident, improper maintenance or repair (other than by Broan-NuTone LLC), faulty installation or installation contrary to recommended installation instructions.

The duration of any implied warranty is limited to the one-year period as specified for the express warranty. Some states do not allow limitation on how long an implied warranty lasts, so the above limitation may not apply to you.

BROAN-NUTONE LLC'S OBLIGATION TO REPAIR OR REPLACE, AT BROAN-NUTONE LLC'S OPTION, SHALL BE THE PURCHASER'S SOLE AND EXCLUSIVE REMEDY UNDER THIS WARRANTY. BROAN-NUTONE LLC SHALL NOT BE LIABLE FOR INCIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES ARISING OUT OF OR IN CONNECTION WITH PRODUCT USE OR PERFORMANCE. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state. This warranty supersedes all prior warranties. To qualify for warranty service, you must (a) notify Broan-NuTone LLC at the address stated below or telephone: 1-800-637-1453, (b) give the model number and part identification and (c) describe the nature of any defect in the product or part. At the time of requesting warranty service, you must present evidence of the original purchase date.

BROAN-NUTONE LLC, 926 West State Street, Hartford, WI 53027

DI-40X-01759-00A

99043742B